





26-0615-00 1020 SAW GUARD KIT INSTRUCTIONS

Revised 12-01-04

Stationary Canister

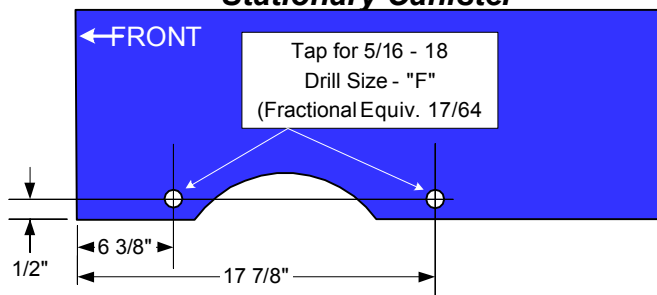

Movable Canister

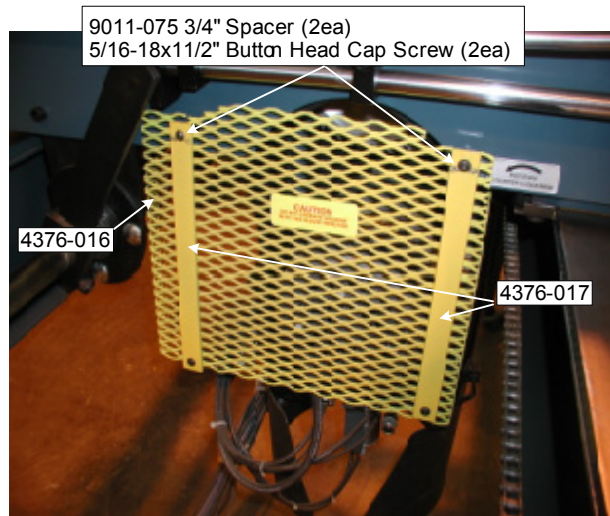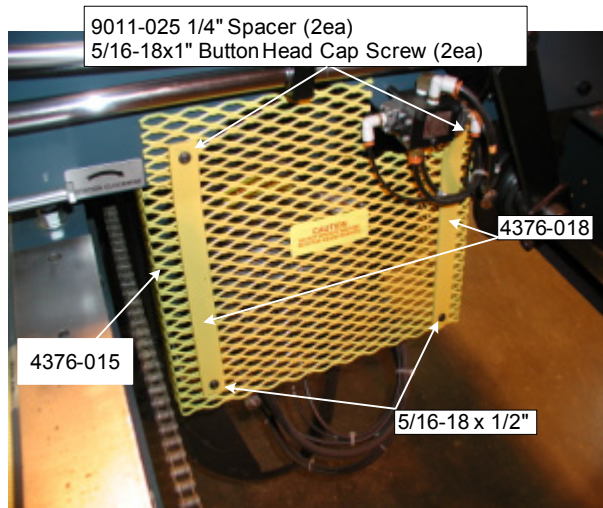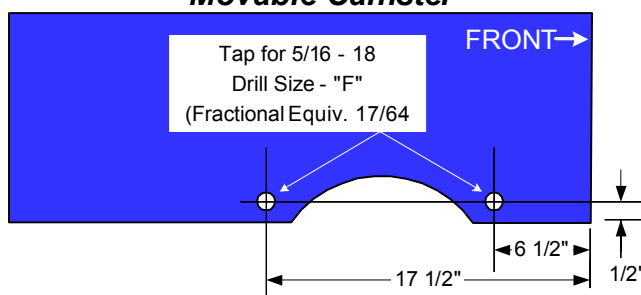

Test fit the guards and keep in mind that the hole locations on the expanded metal guards might be slightly off from the dimensions shown above.

Instructions:

1. Drill two holes each on each canister, and tap the holes to 5/16-18 threads per the drawing.
2. Secure the stiffeners to the lower end of the guards. using two each of the 5/16-18 x 1/2" button head cap screw, 5/16-18 hex nut and 5/16 flat and lock washers.
3. Install the Stationary Canister guards and stiffeners using two 1/4" spacers and 5/16-81x1" button head cap screws.
4. Install the Movable Canister guards and stiffeners using two 3/4" spacers and 5/16-81x1 1/2" button head cap screws.

Once the guards are in place, they can be bent out slightly to clear the motor, wiring, and air lines when the motor is up.

KIT CONTENTS

PART NO.	DESCRIPTION	QTY.
4376-015	Belt&Saw Guard (Stationary)	1
4376-018	Saw Guard Stiffner (Stationary)	2
4376-016	Belt&Saw Guard (Movable)	1
4376-017	Saw Guard Stiffner (Movable)	2
9011-025	Spacer .385 x .625 x .25	2
9011-75	Spacer .385 x .625 x .75	2
5/16-18 x 1"	5/16-18 x 1 " Button Head Cap Screw	2
5/16-18 x 1 1/2"	5/16-18 x 1 1/2 " Button Head Cap Screw	2
5/16-18 x 1/2"	5/16-18 x 1/2" Button Head Cap Screw	4
HN5/16-18	5/16-18 Hex Nut	4
FW5/16	5/16 Flat Washer	4
LW5/16	5/16 Lock Washer	4